 
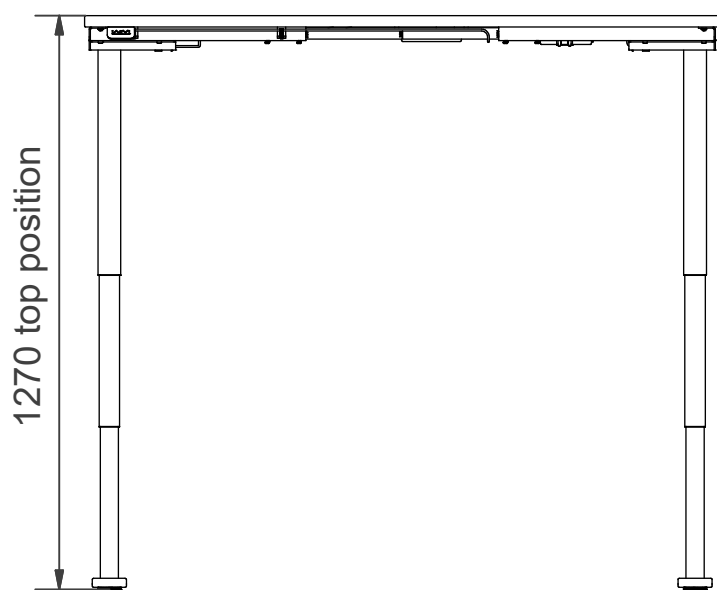 
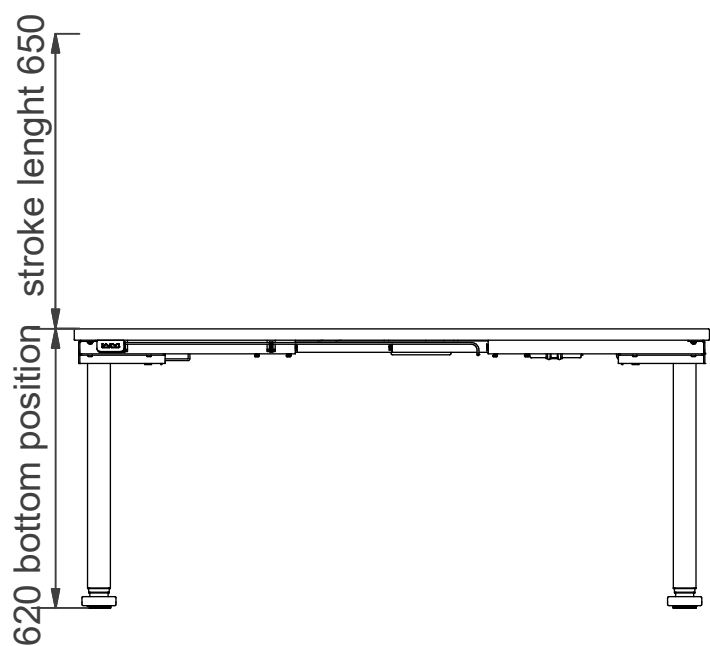 
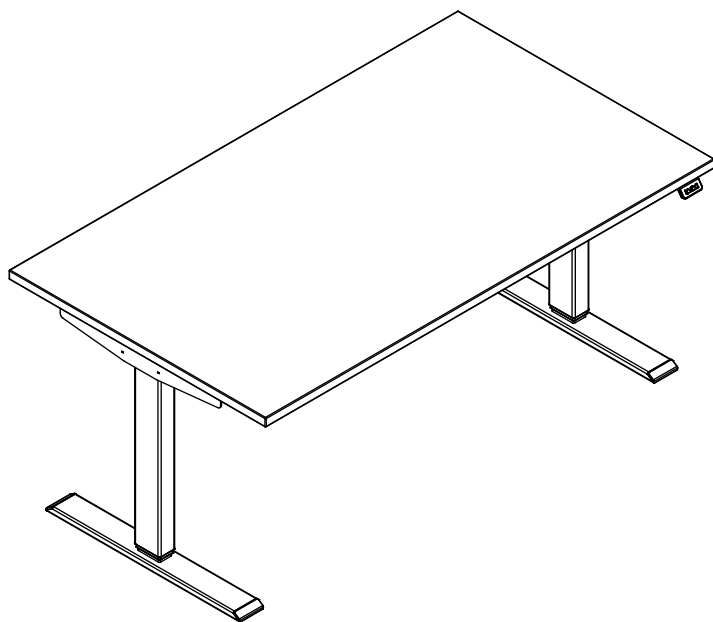 


Assembly & use instructions

Basic2 electric table

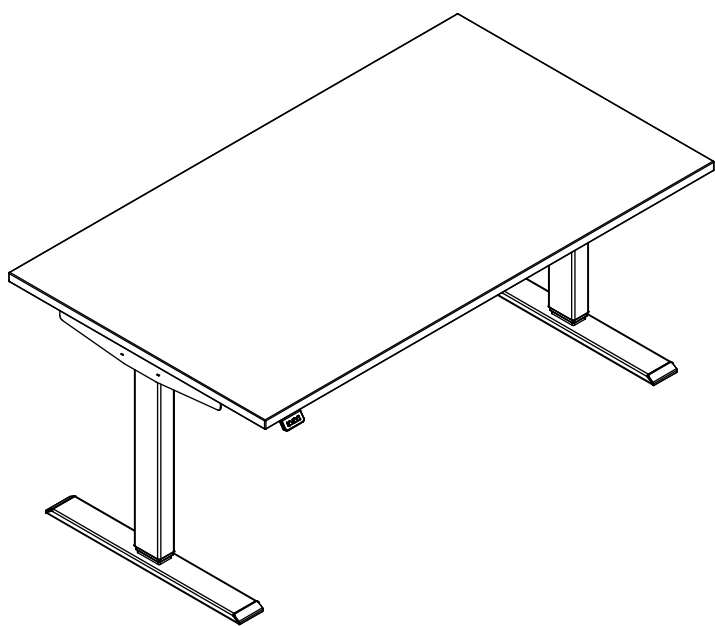

Parts and accessories:

Tools needed:

Allen wrench 4mm

Tape measure (not included in delivery)

Phillips head screwdriver
(not included in delivery)


The desktop is not included in delivery!

- | | |
|--------------------|--------|
| (1) Side Bracket | 2 pcs |
| (2) Upper Frame | 4 pcs |
| (3) Center Rail | 2 pcs |
| (4) Leg Part | 2 pcs |
| (5) Foot Part | 2 pcs |
| (6) Handset | 1 pc |
| (7) Control box | 1 pc |
| (8) Fastening band | 1 pc |
| (9) Converter | 1 pc |
| (10) Power Cord | 1 pc |
| (11) Cable Clip | 10 pcs |


16xmachine screw KM6x35

8xmachine screw KM6x30

 A

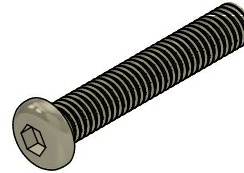

B

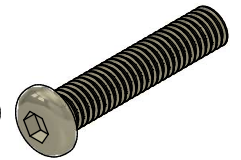 


2xwood screw K5x16


D







12xwood screw K5x20

      C

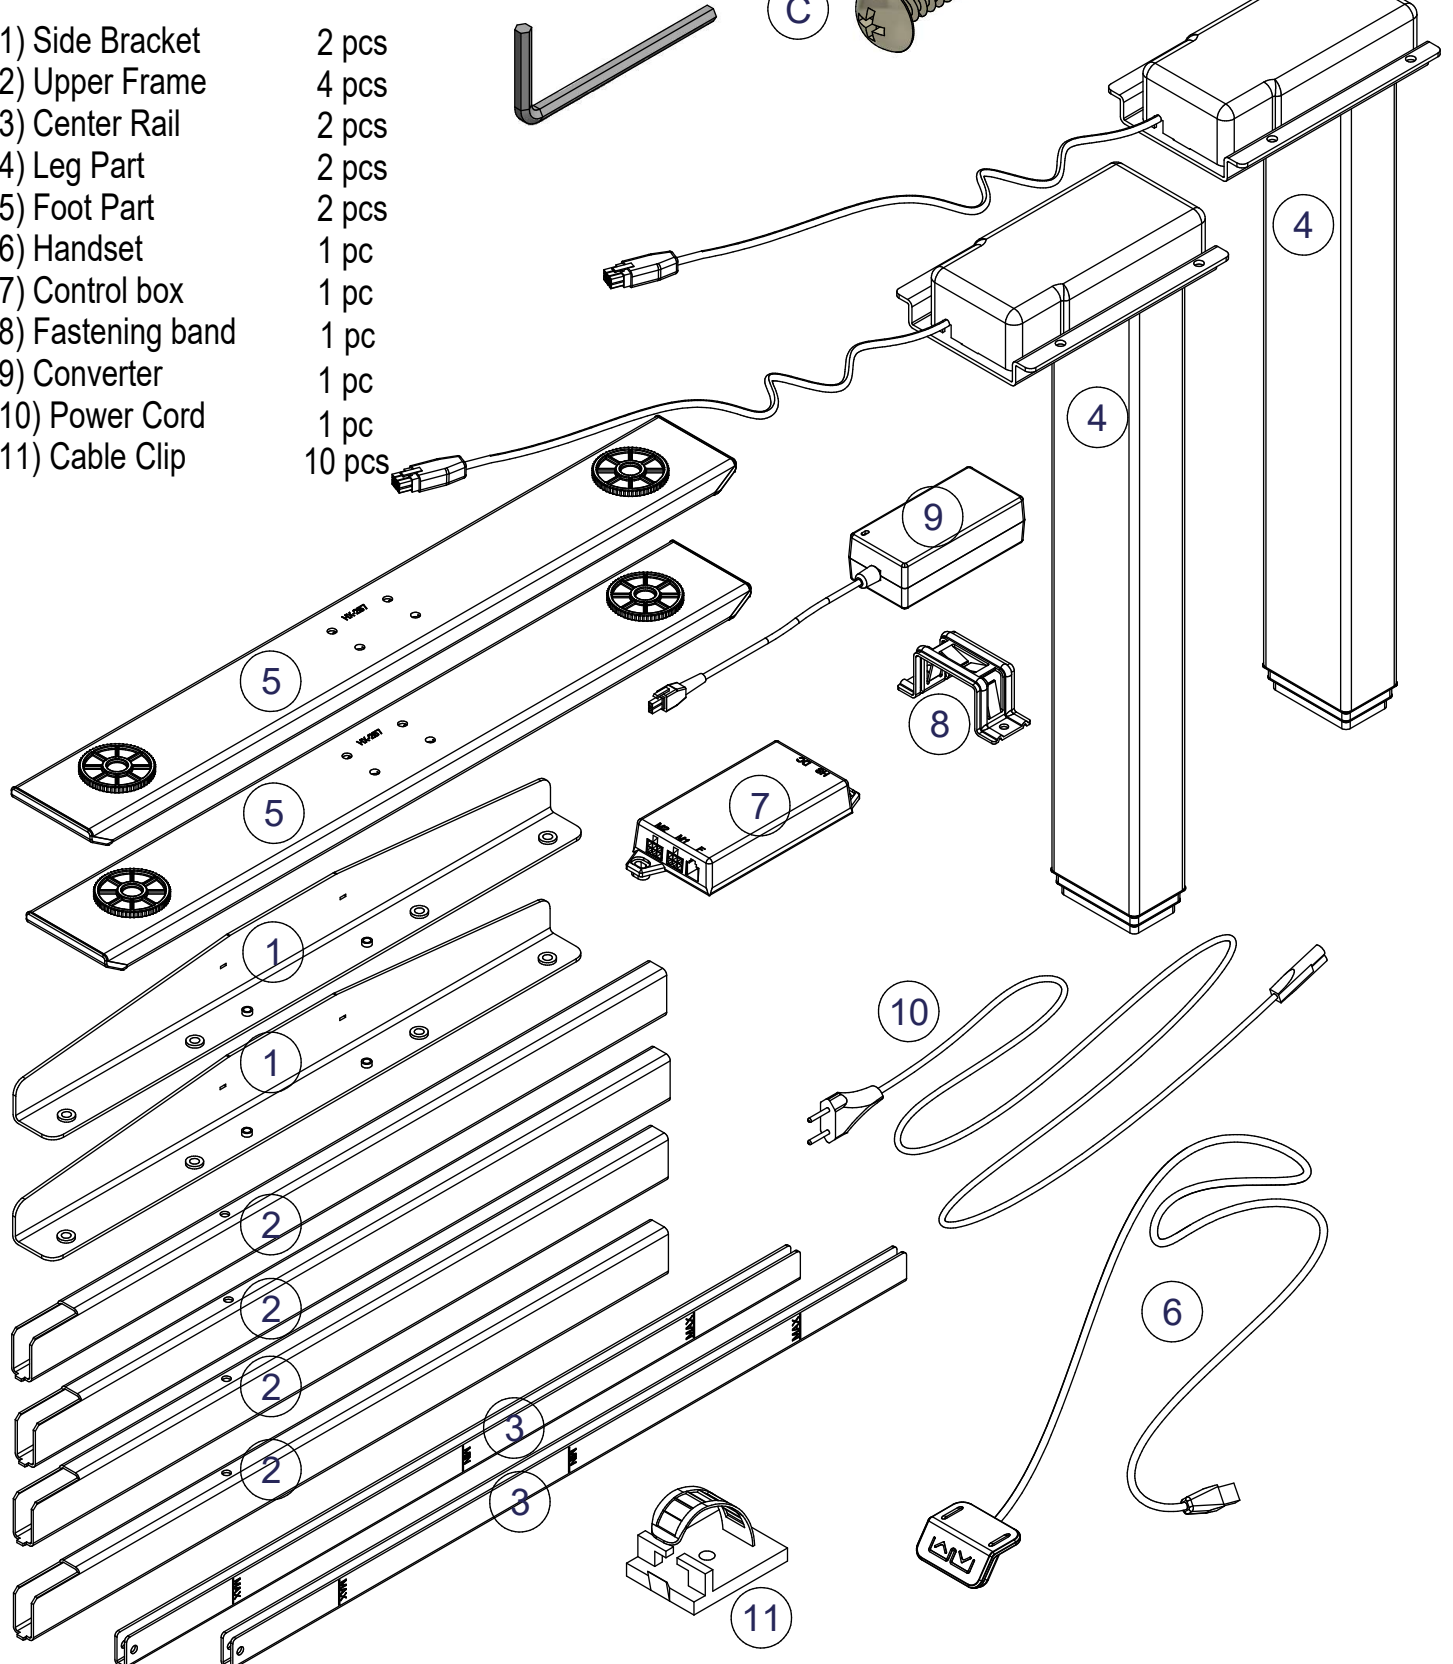

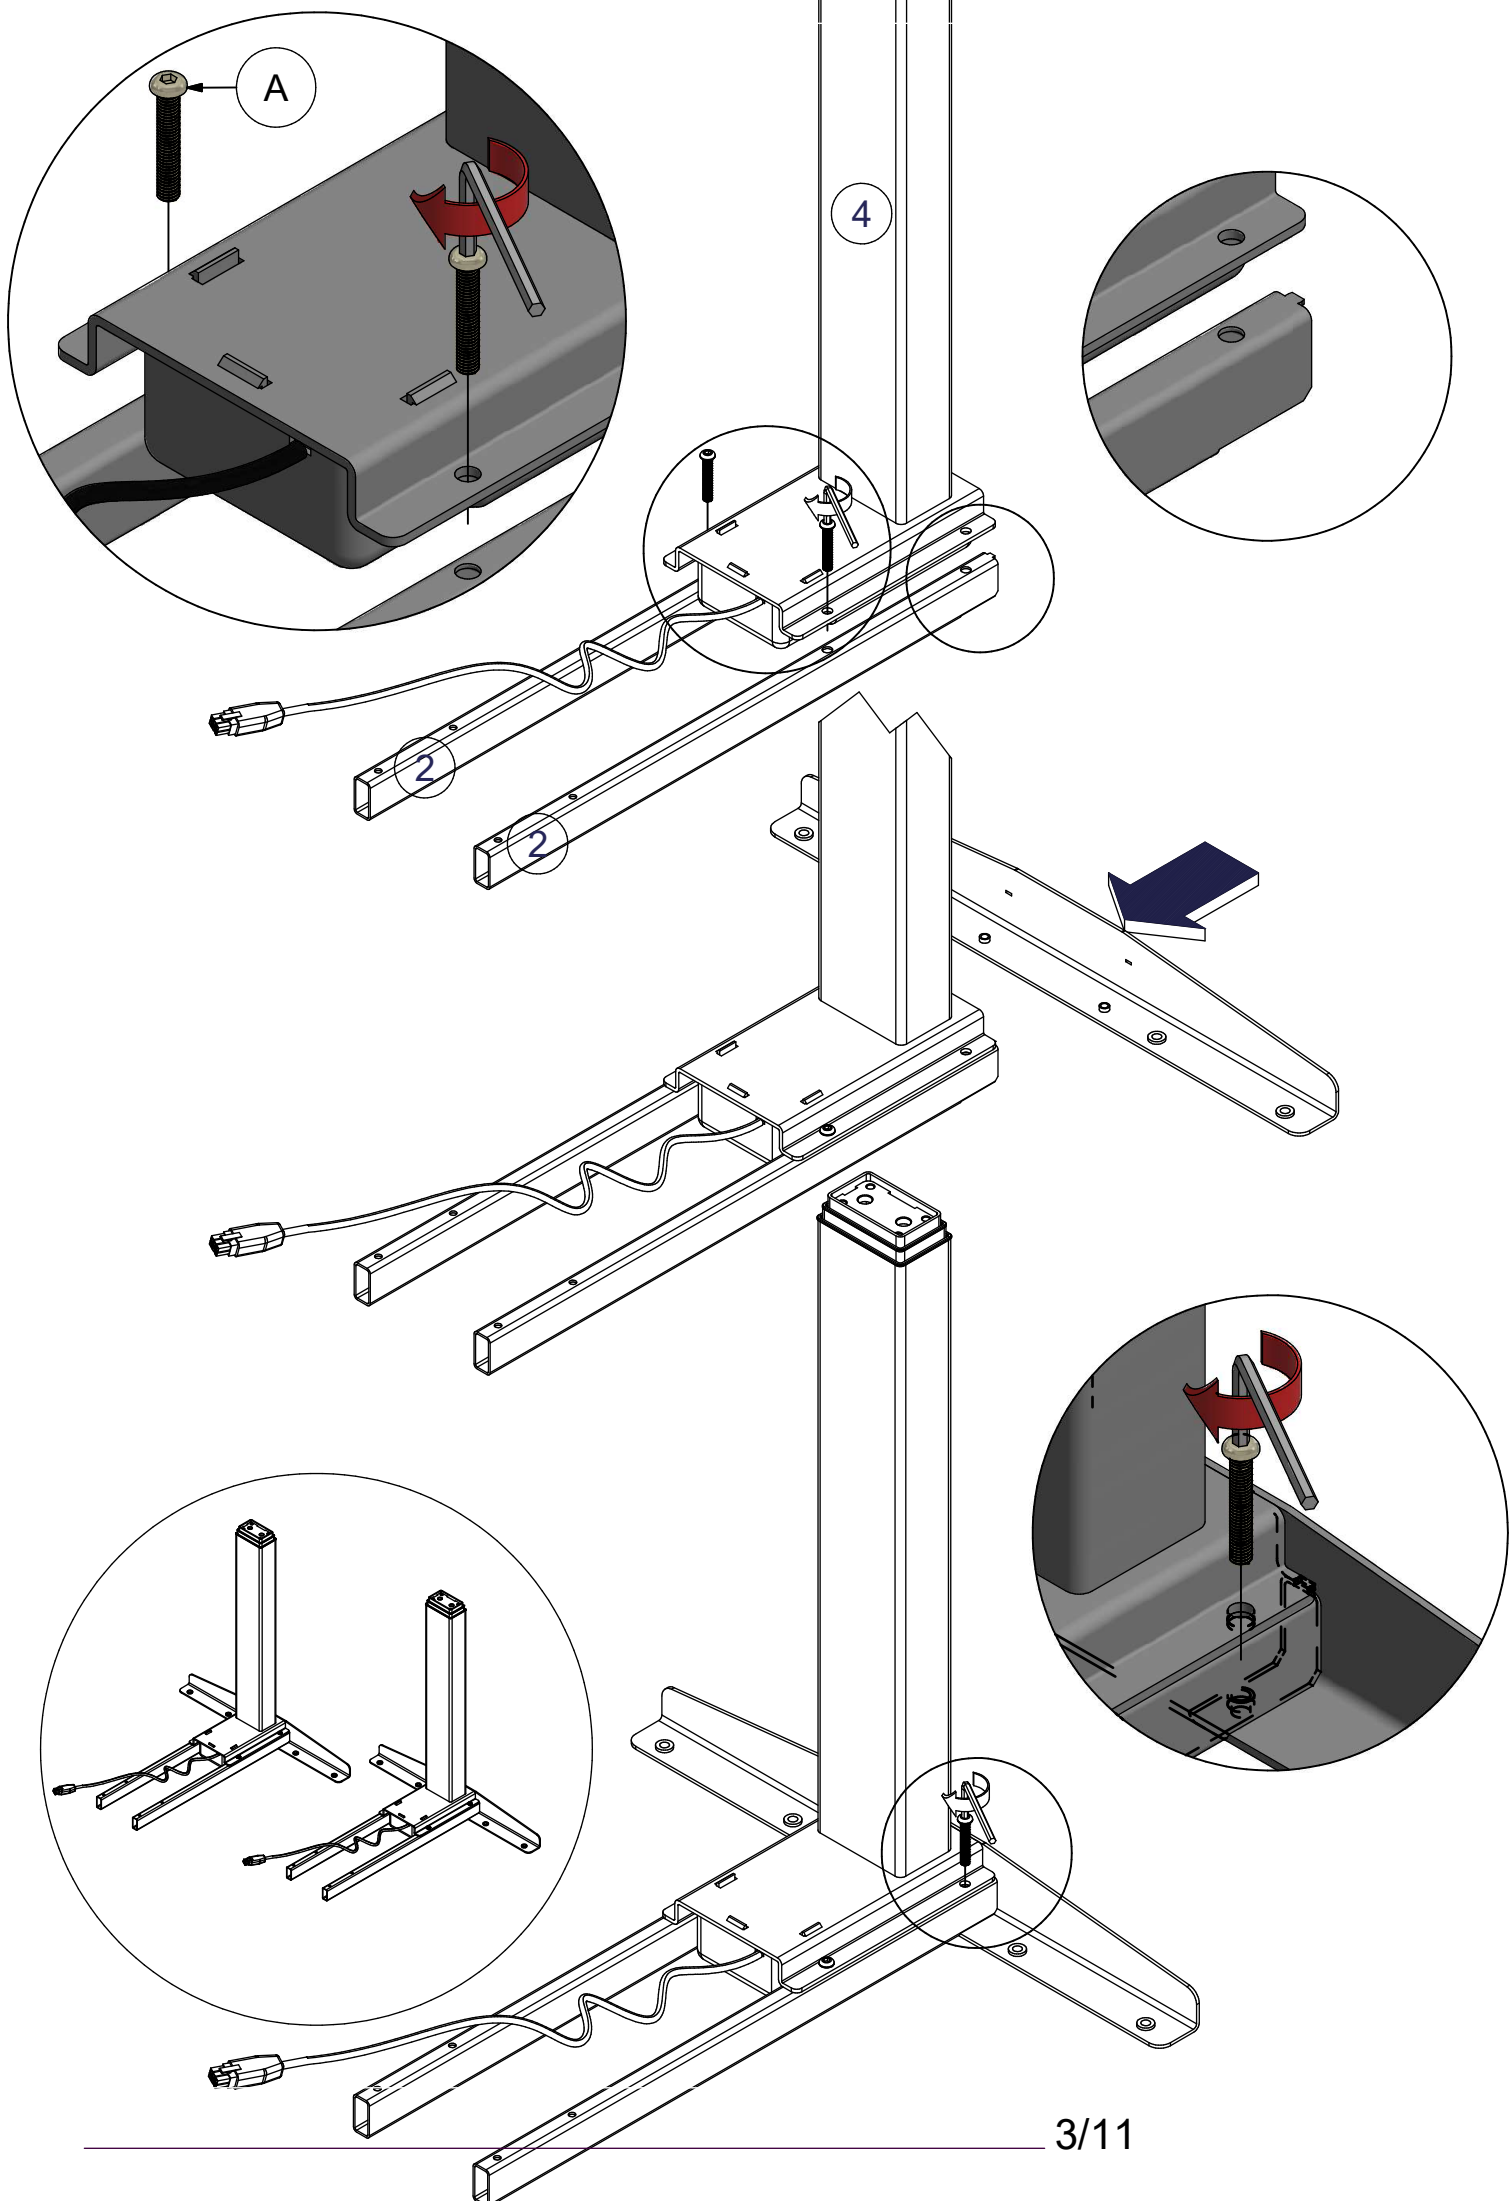



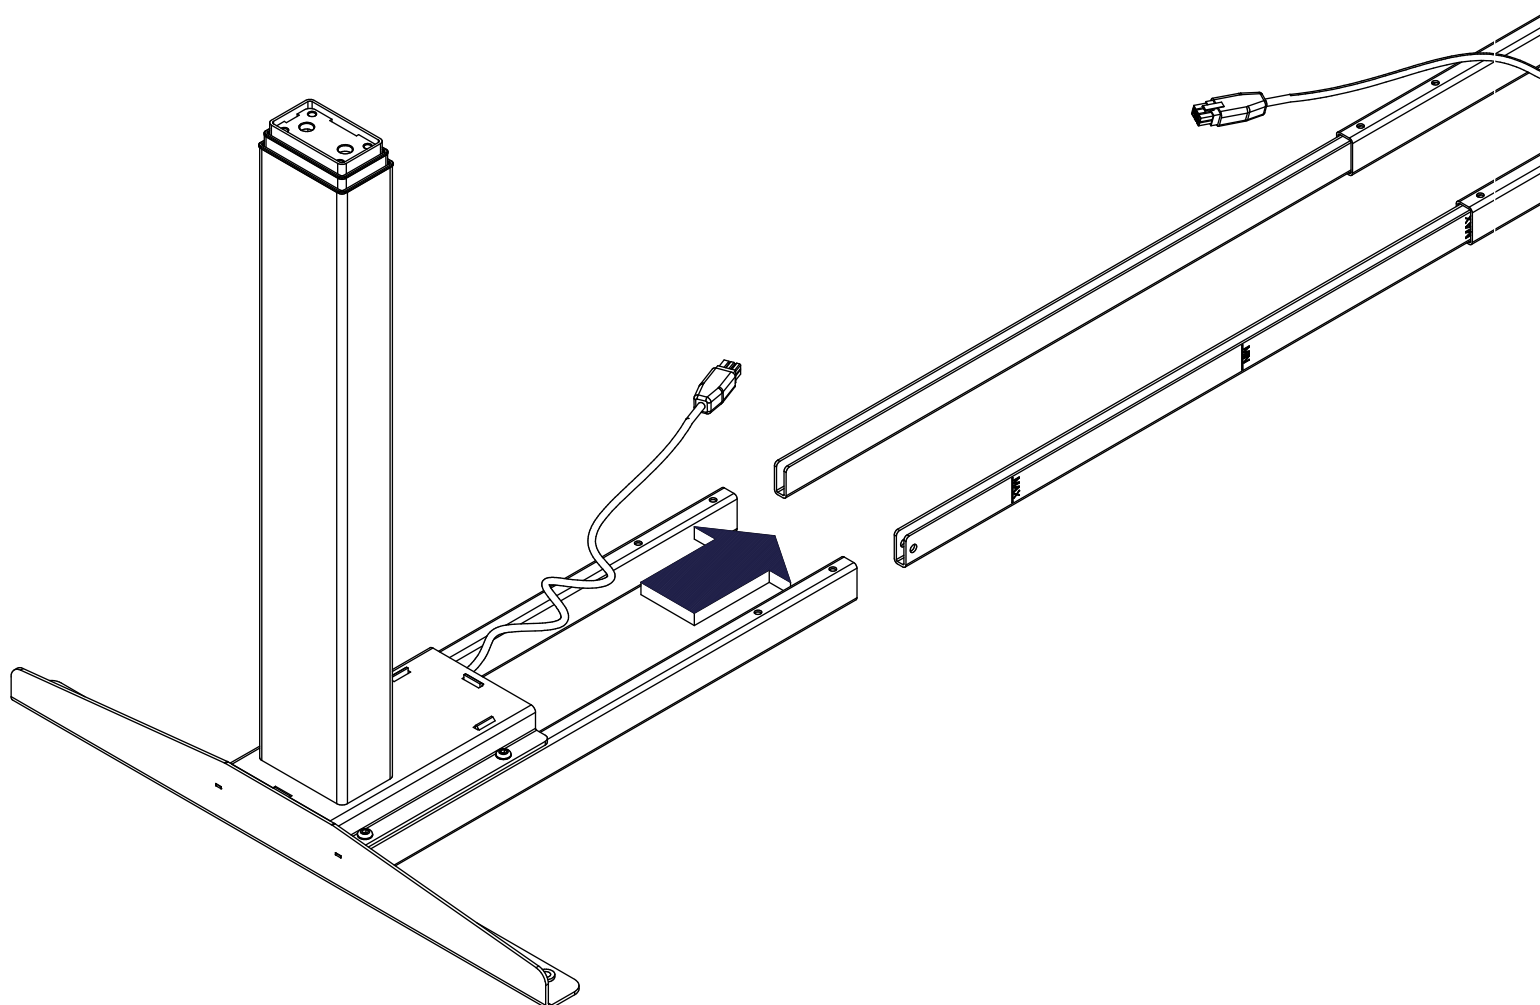
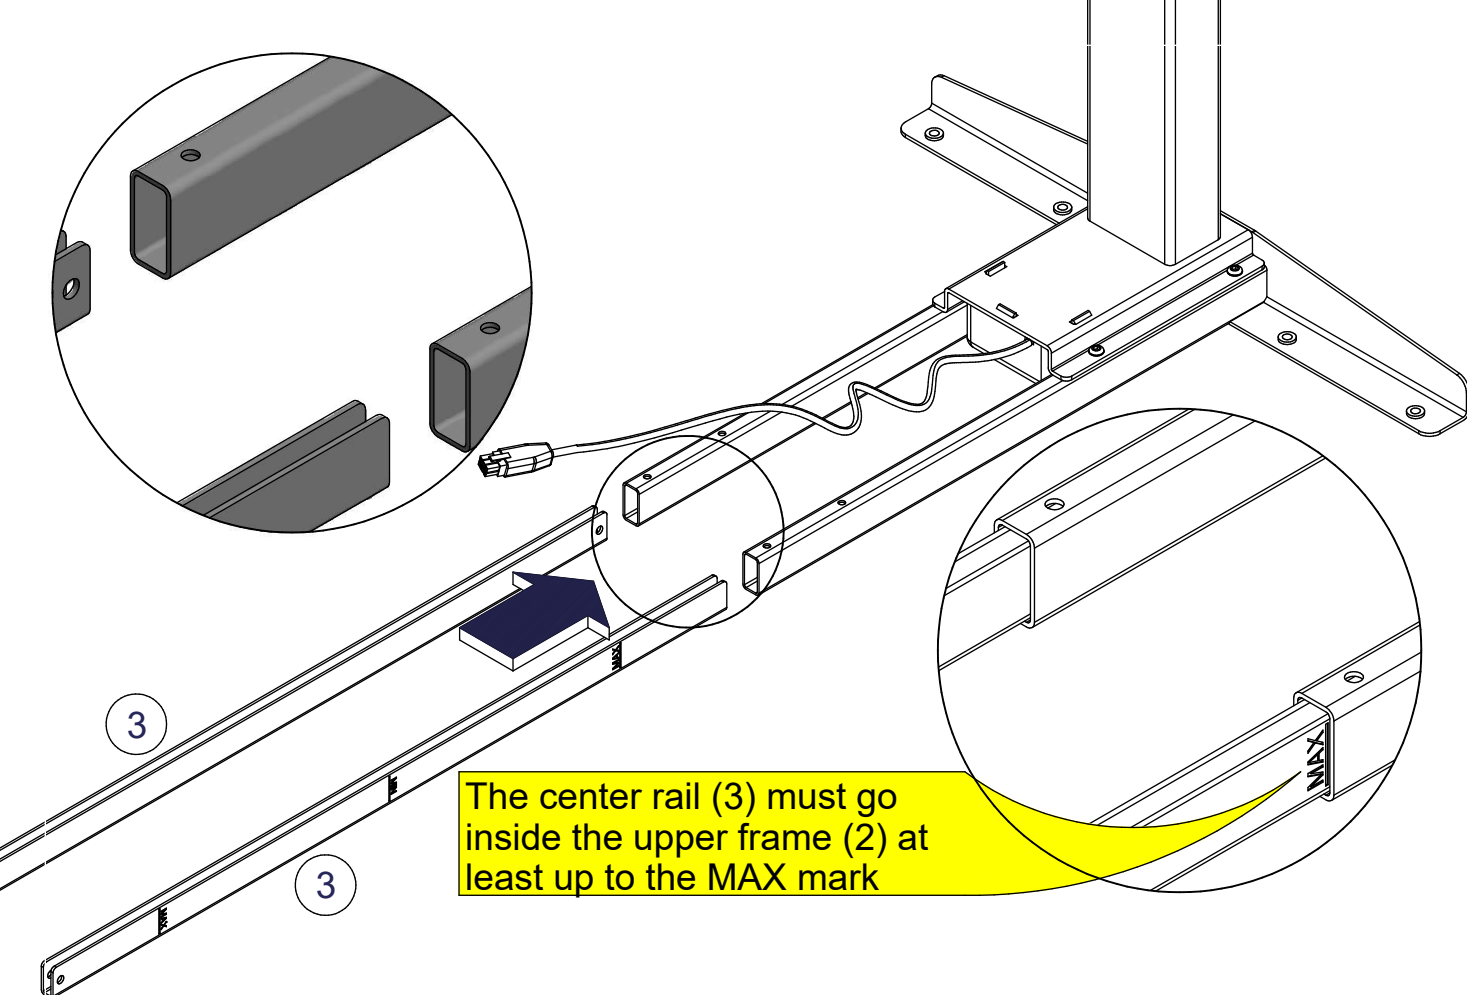


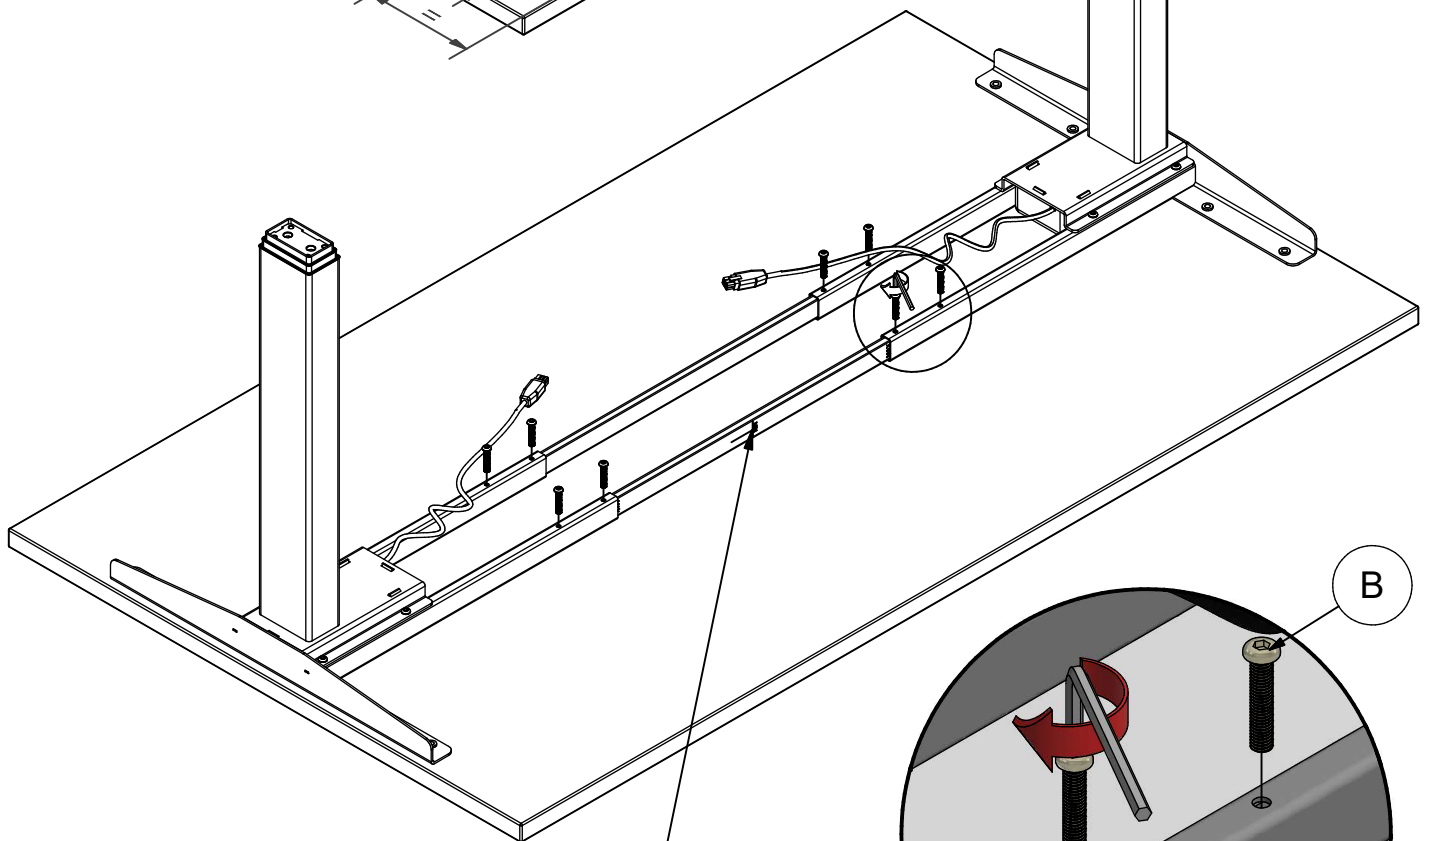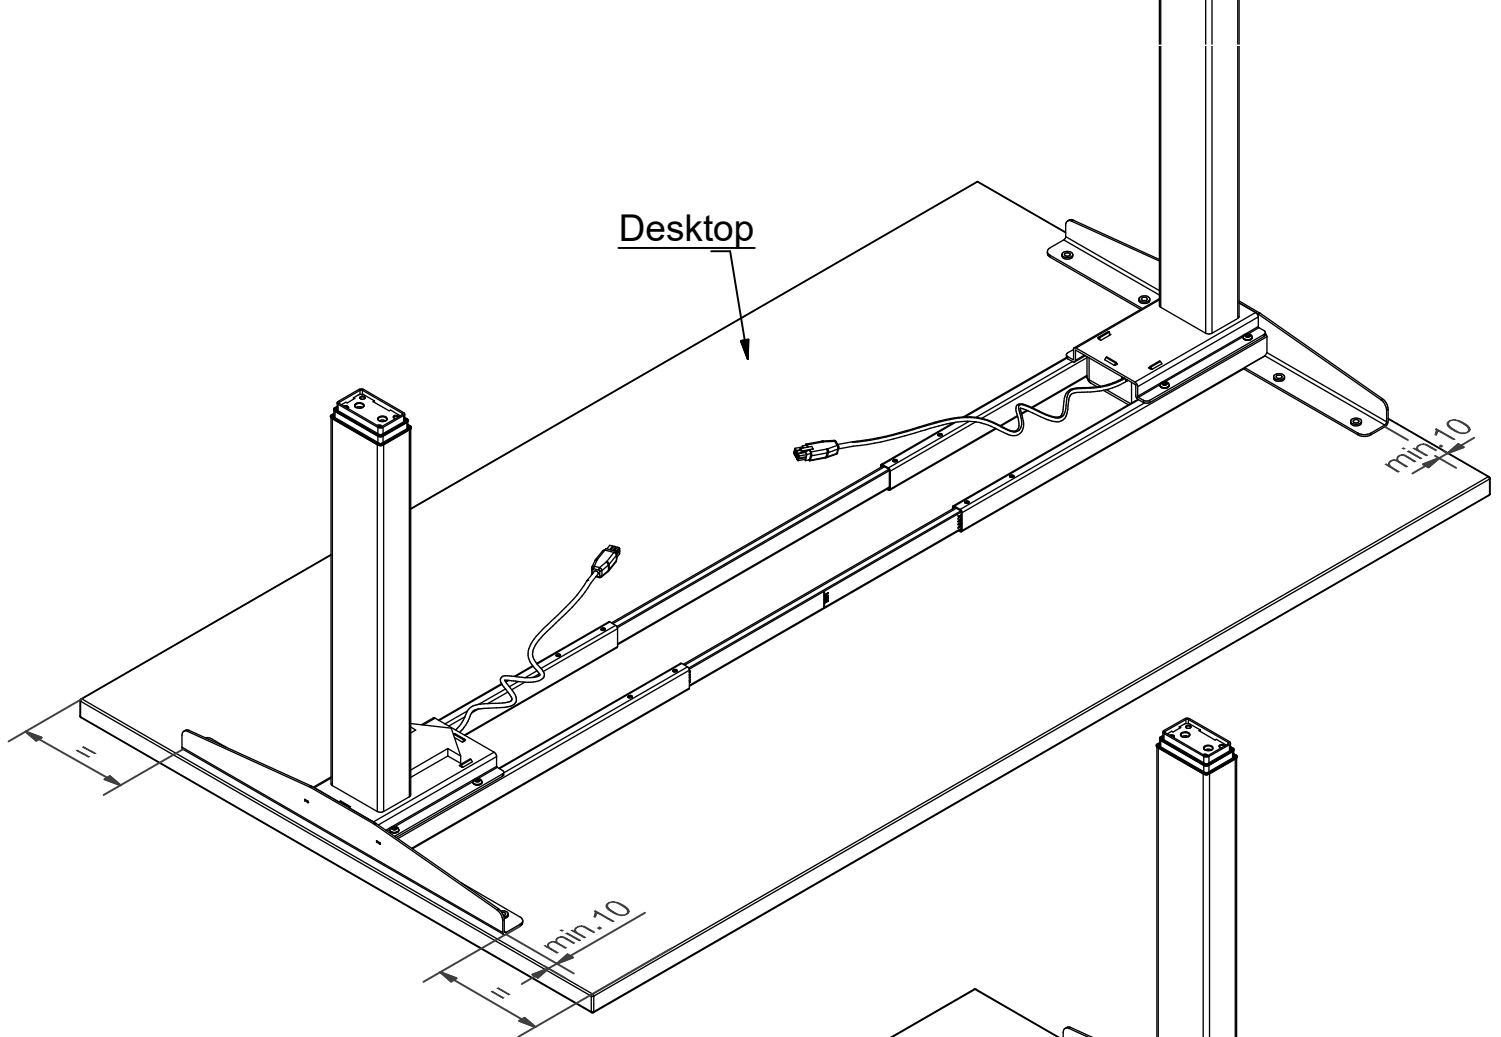



Adjust the rails symmetrically before inserting screws



 
 
 
 
Adjust the width of the desk base to fit the desktop by sliding the two halves outward. Notice "MAX" marking.

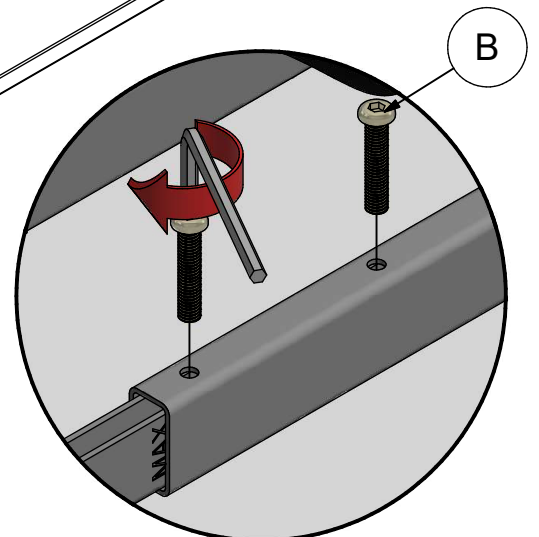


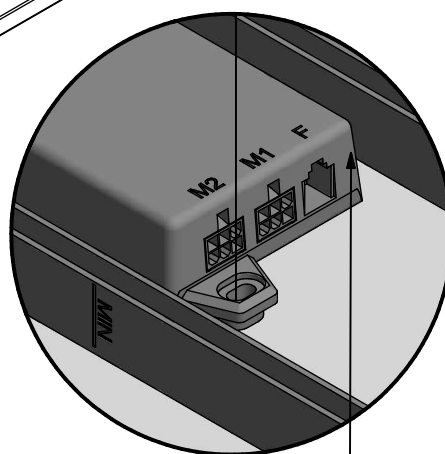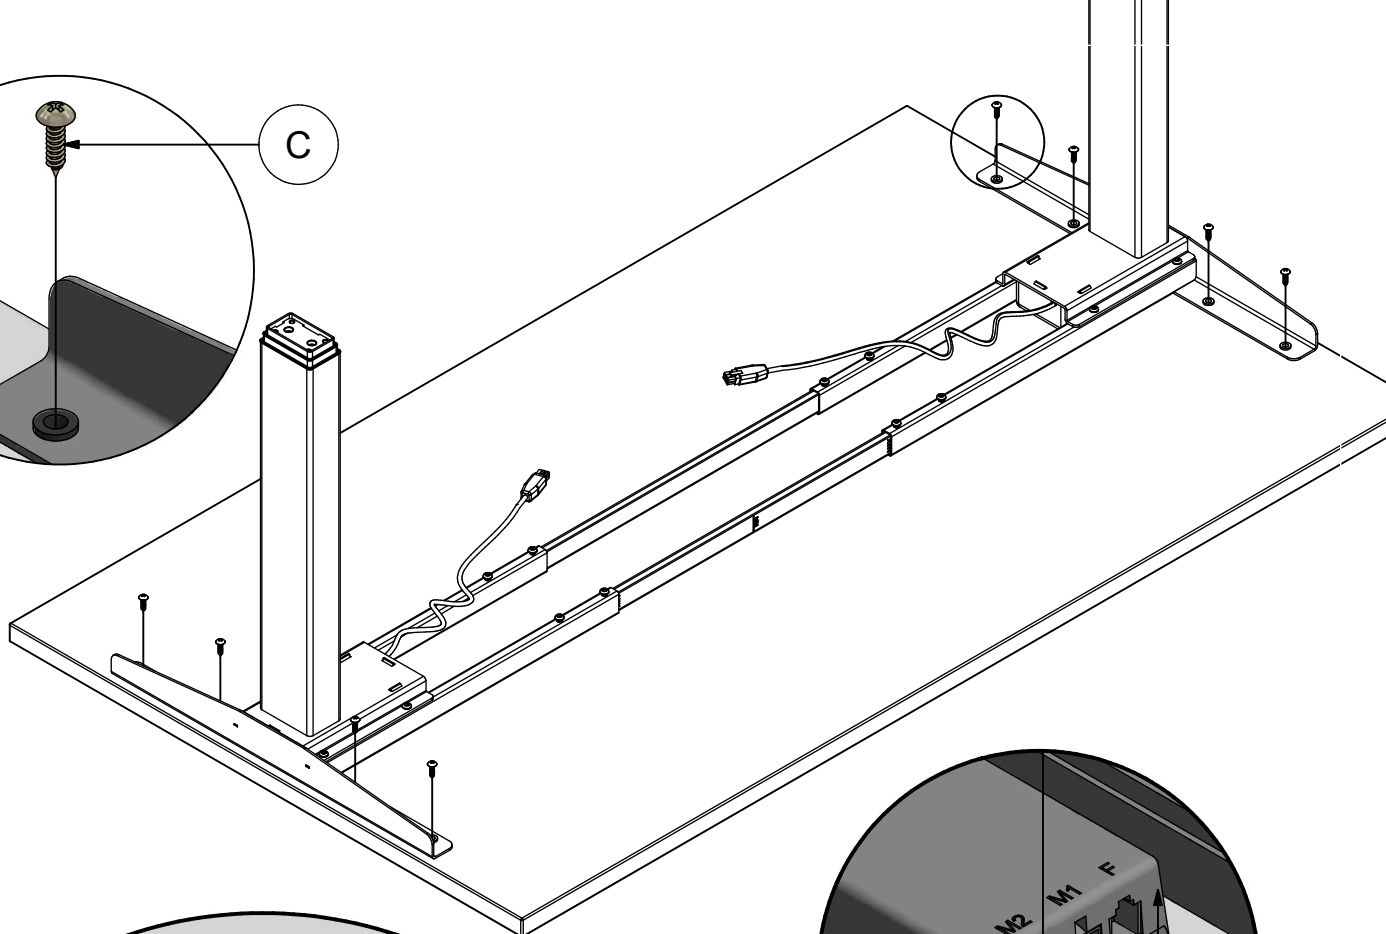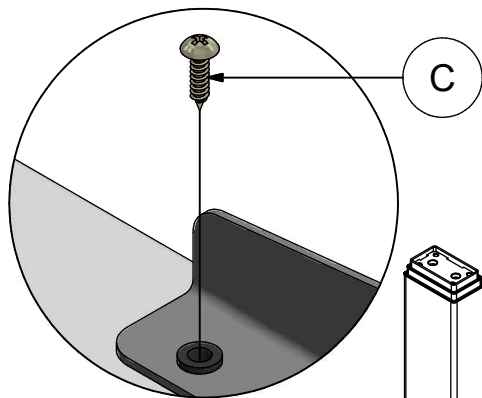


           
 
 
Place the control box's side in the center of the table

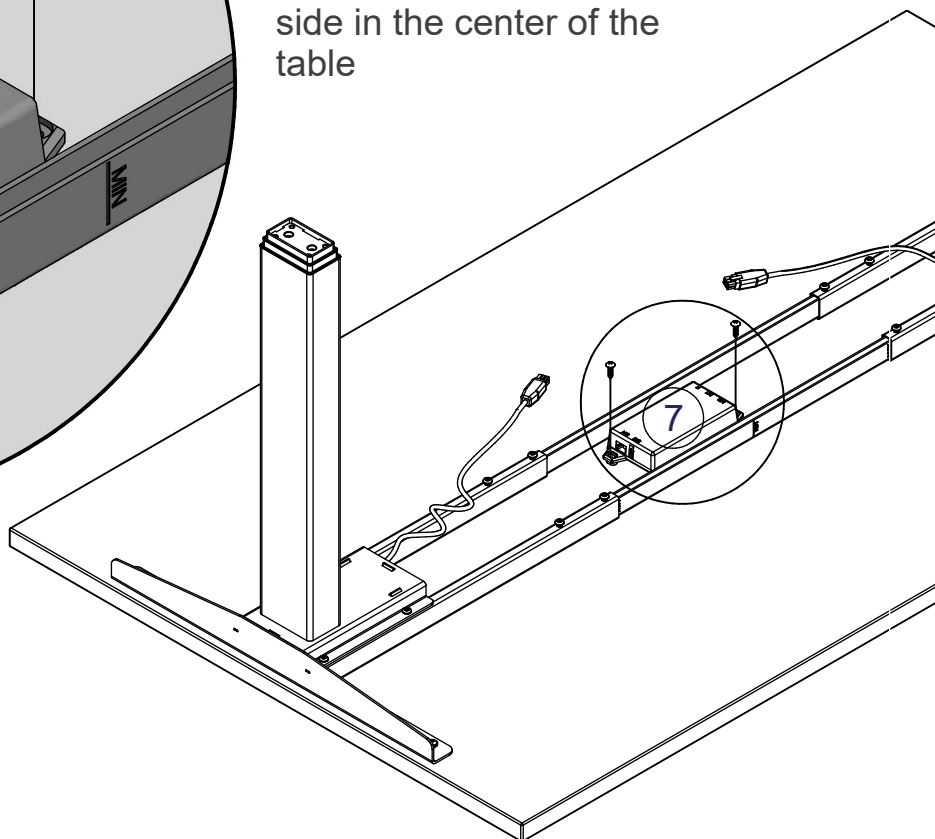 
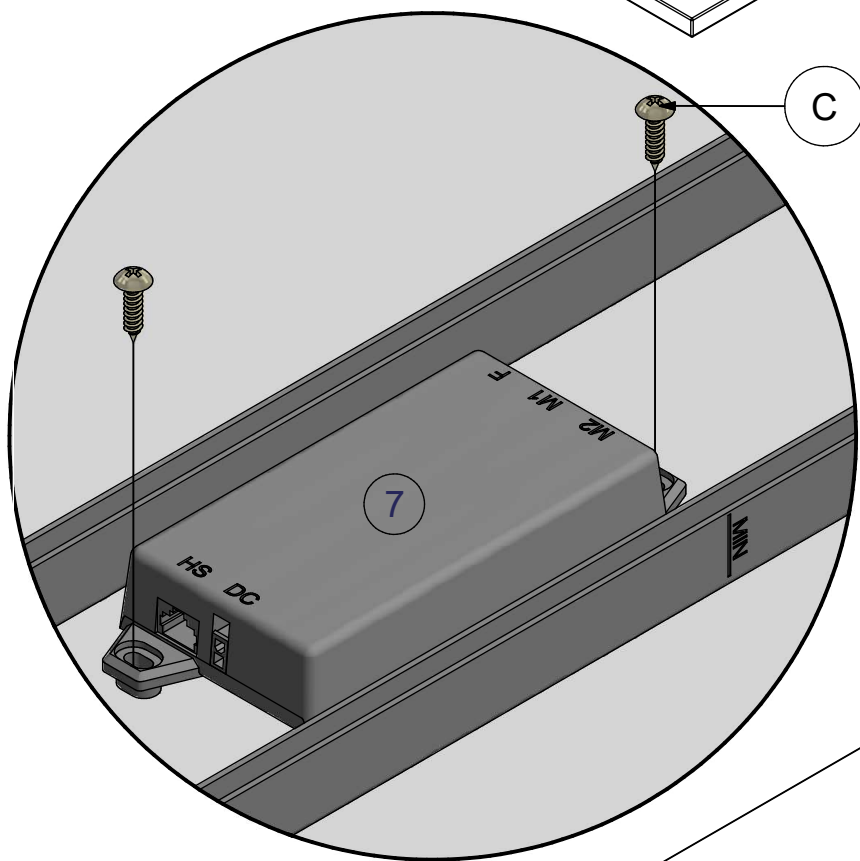 


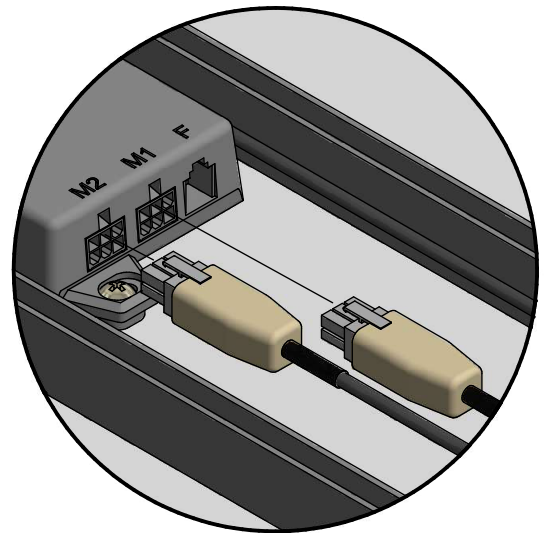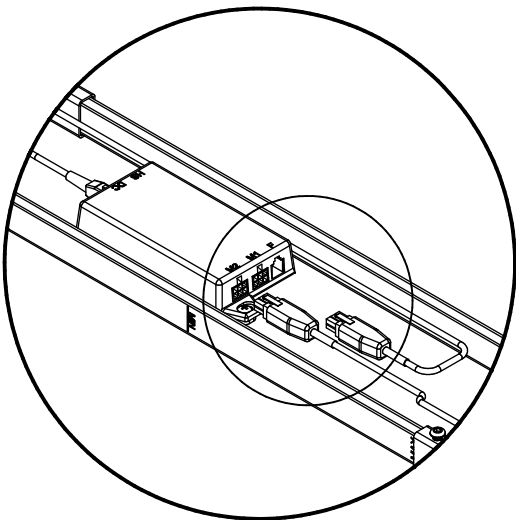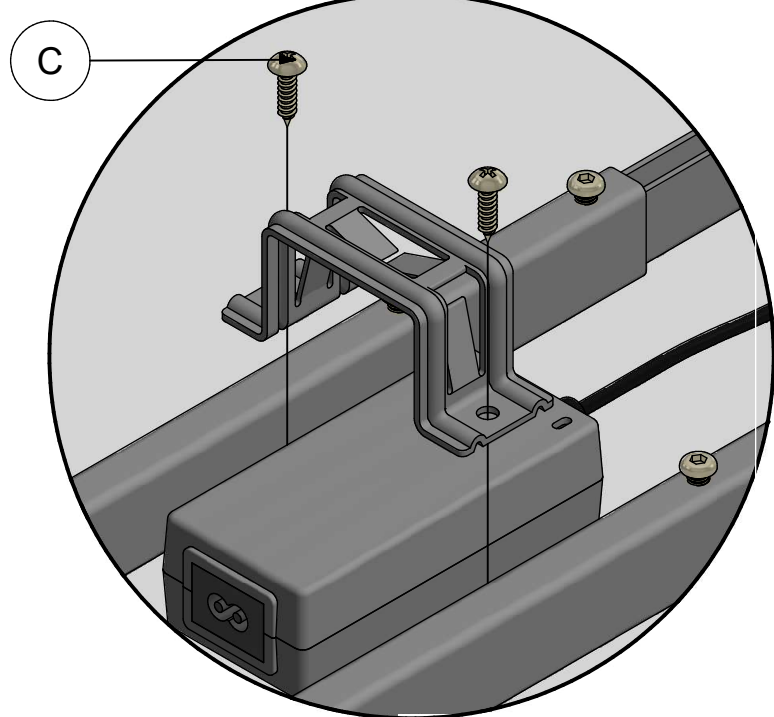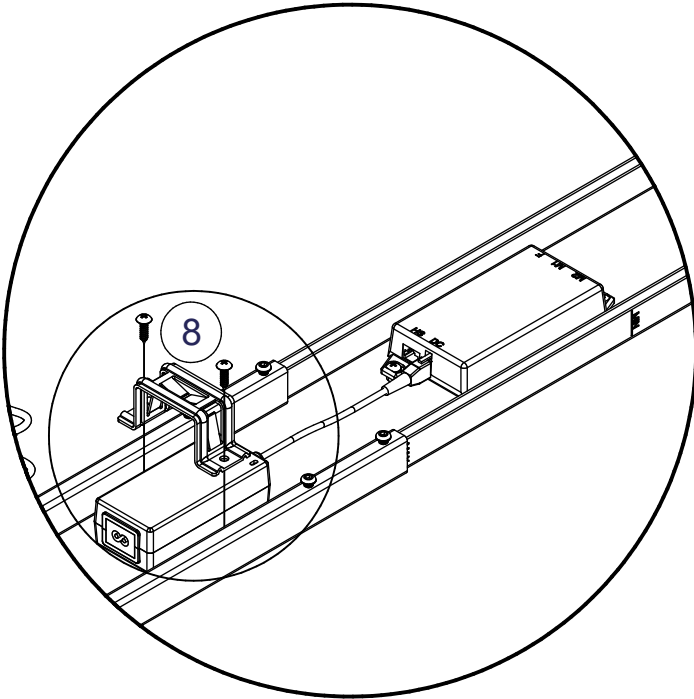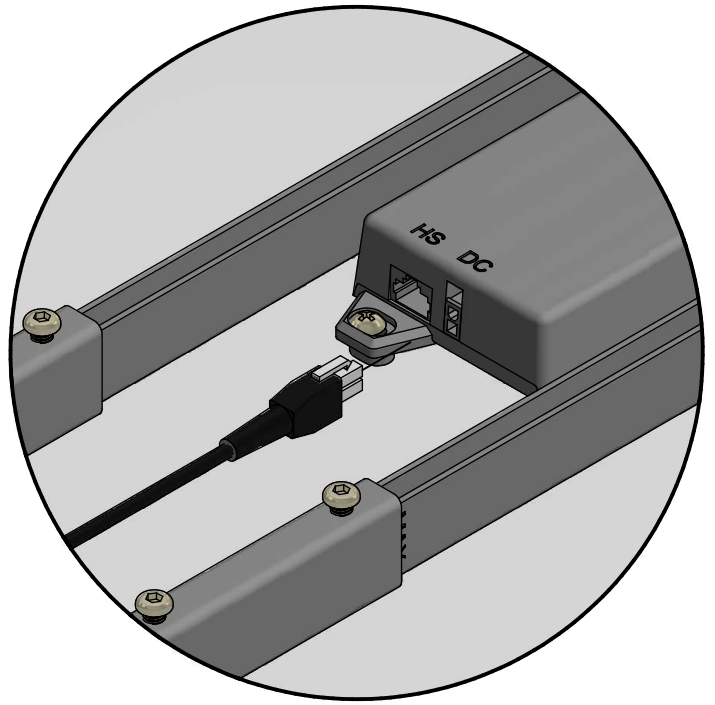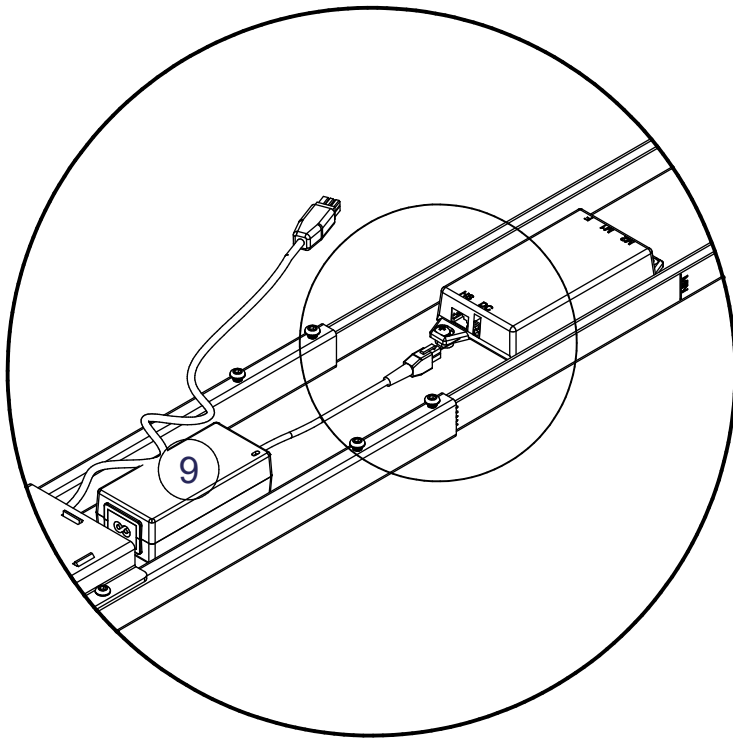

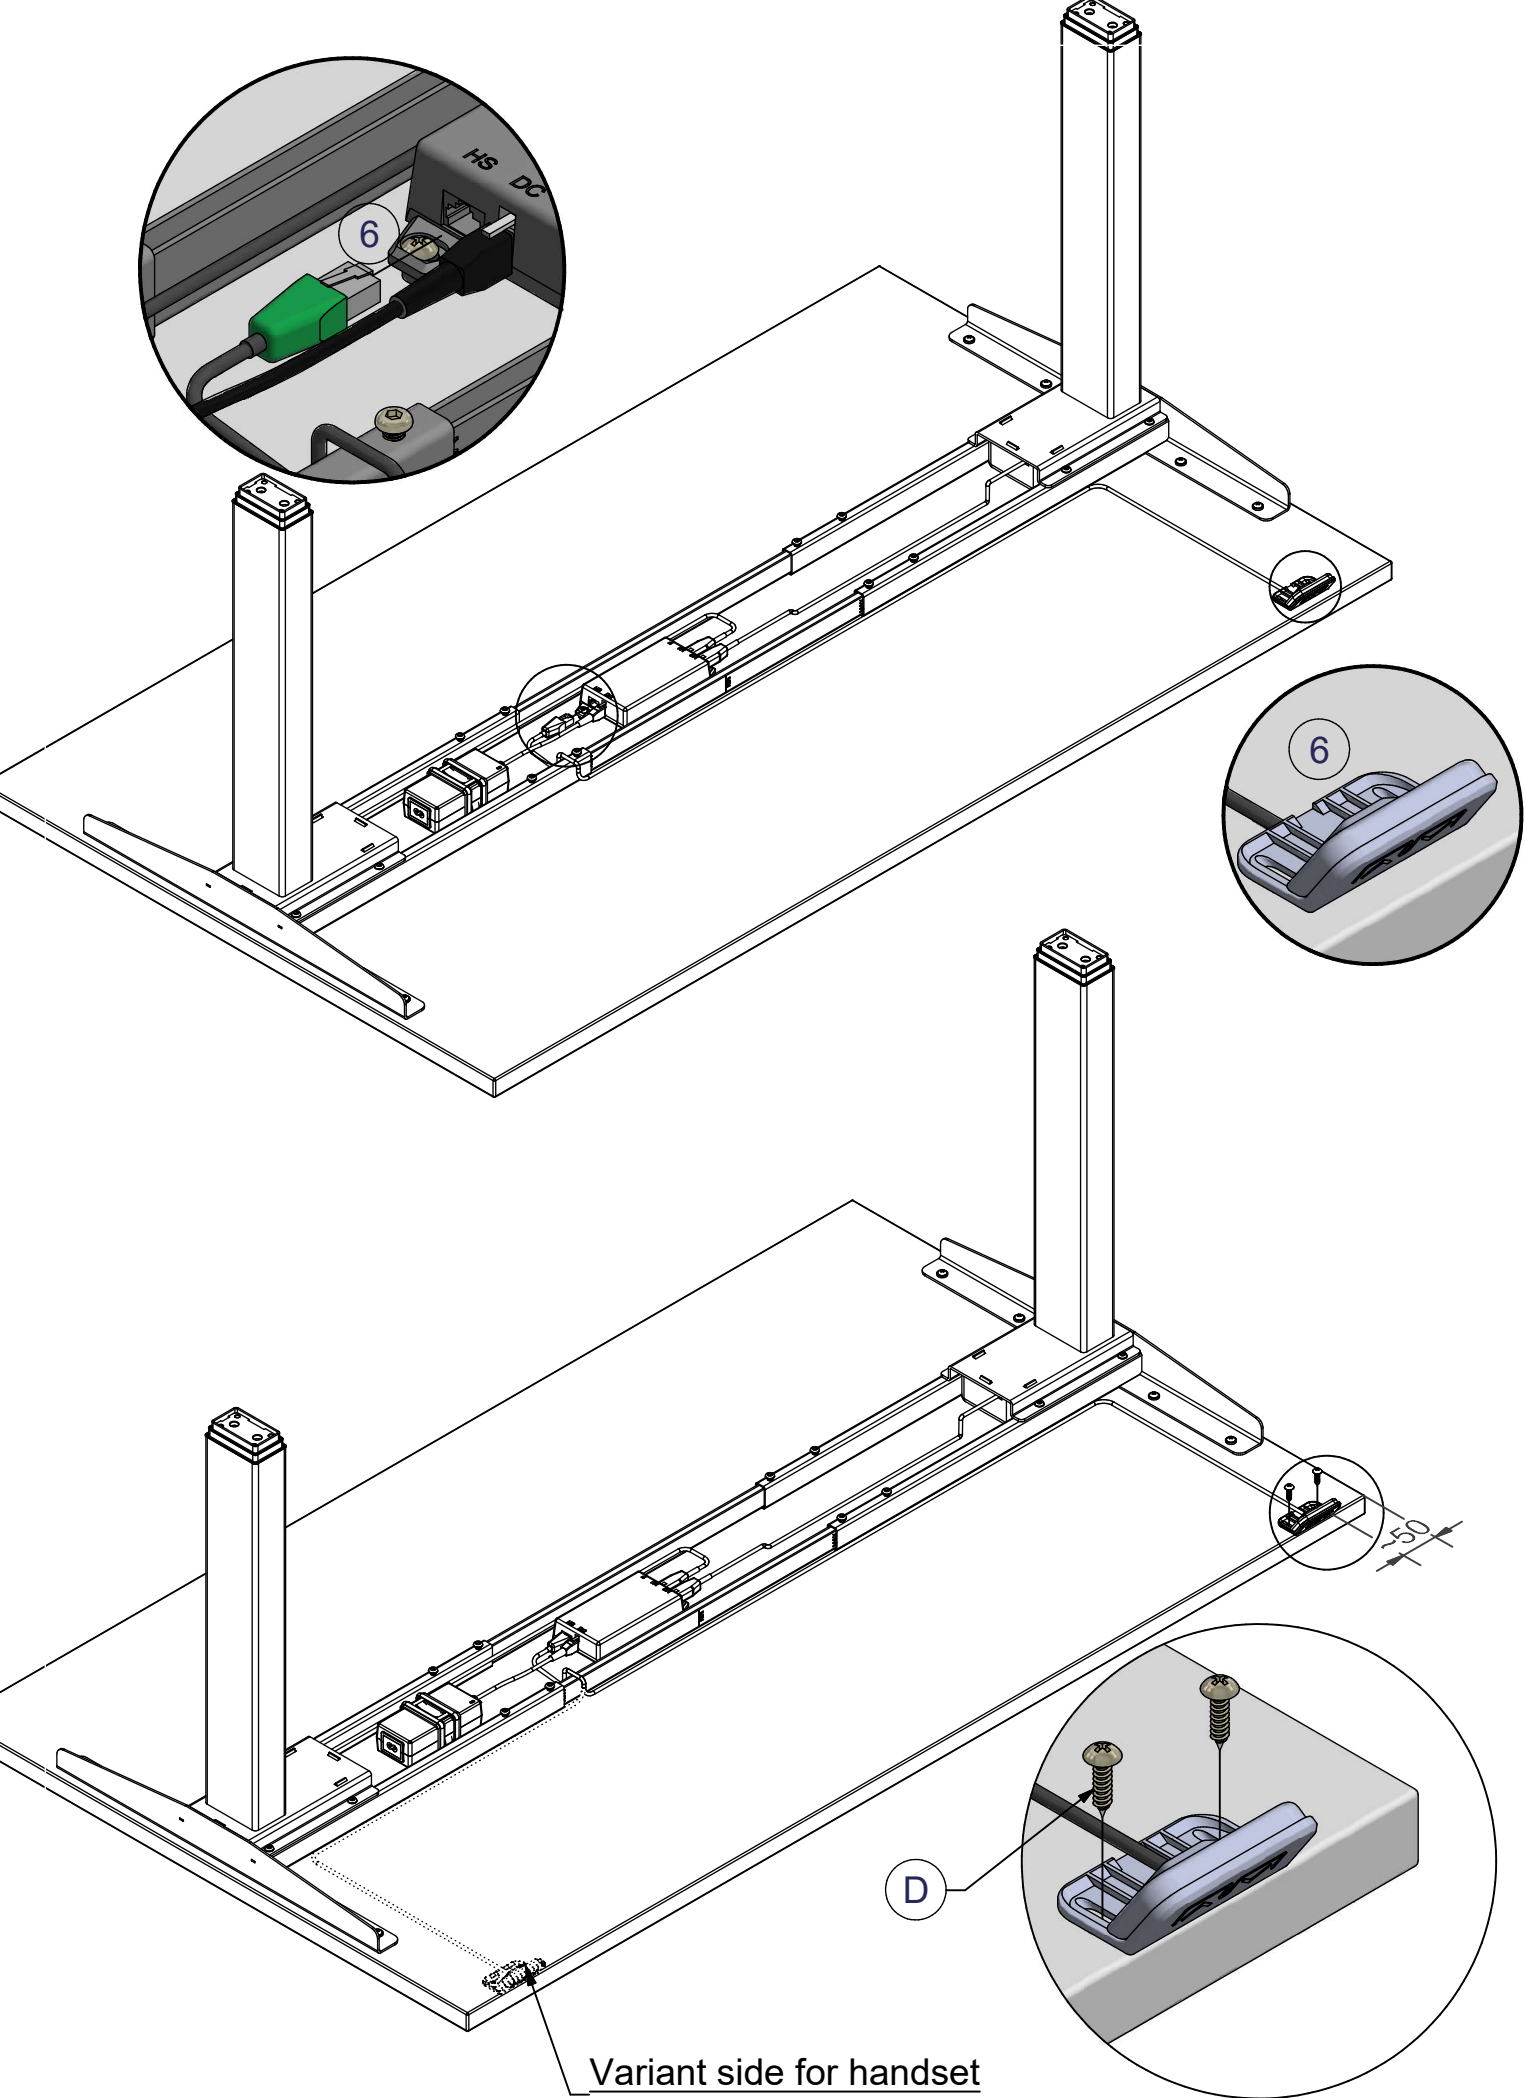

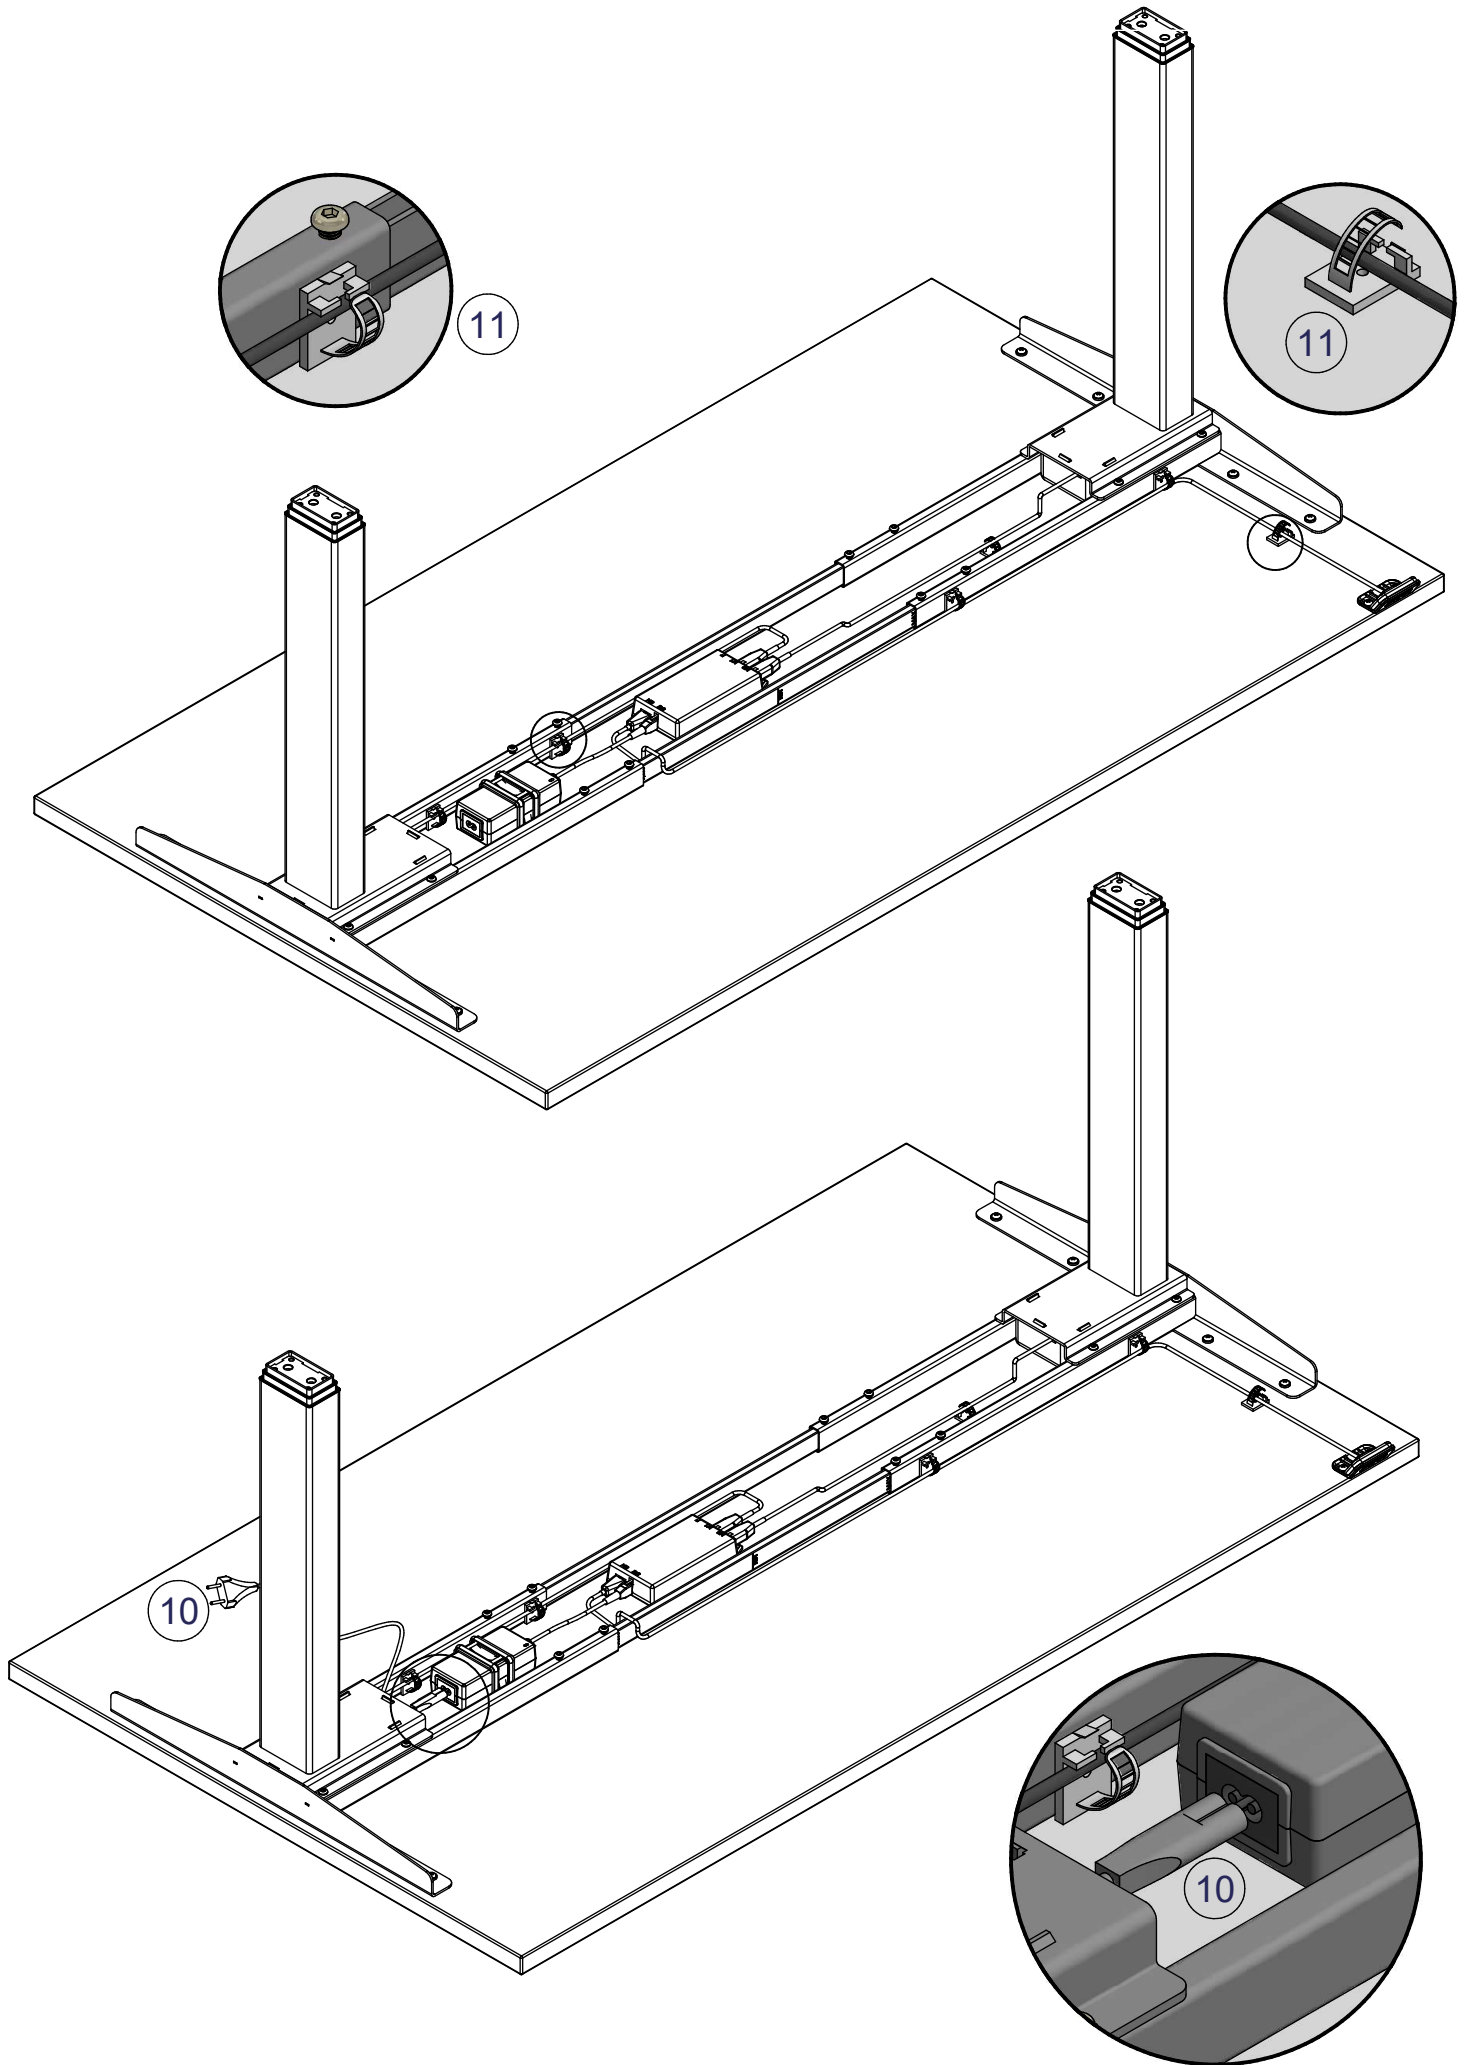

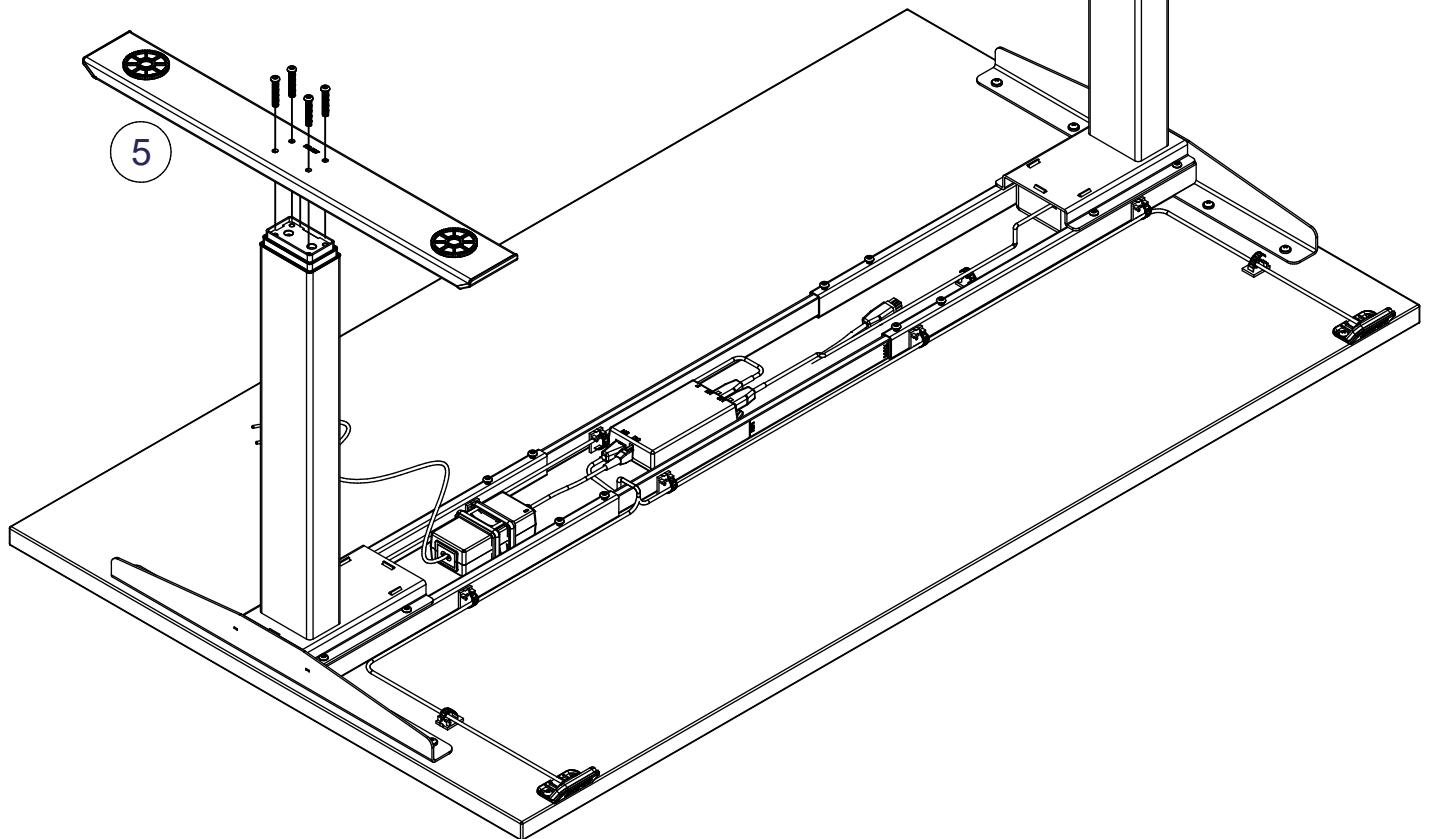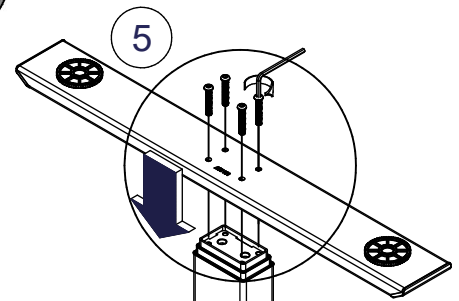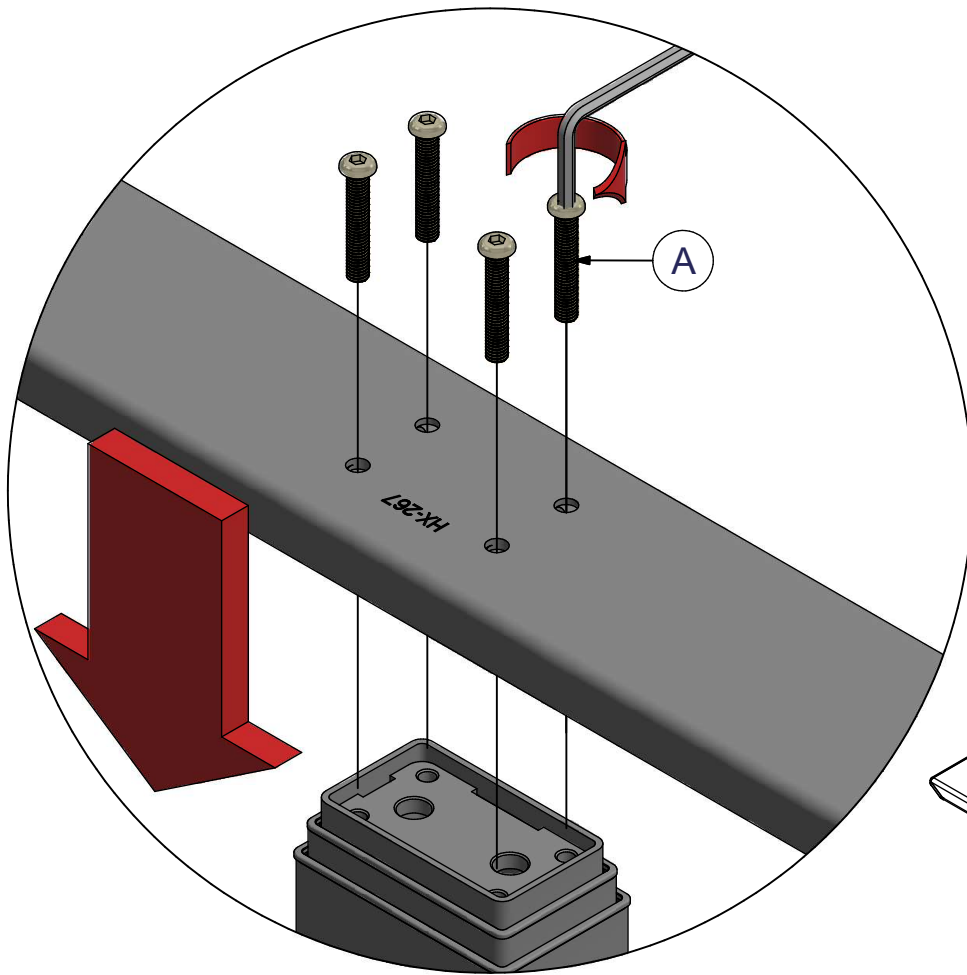

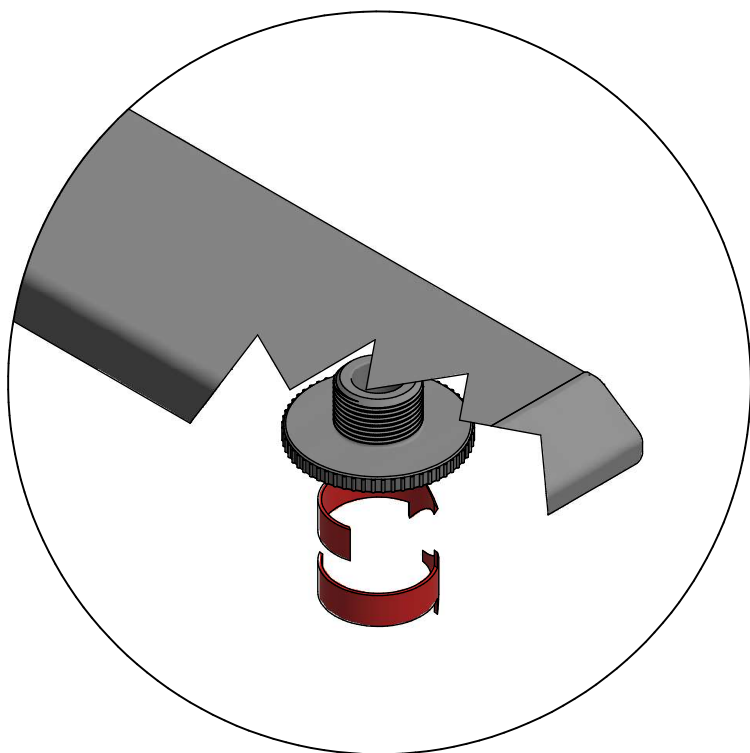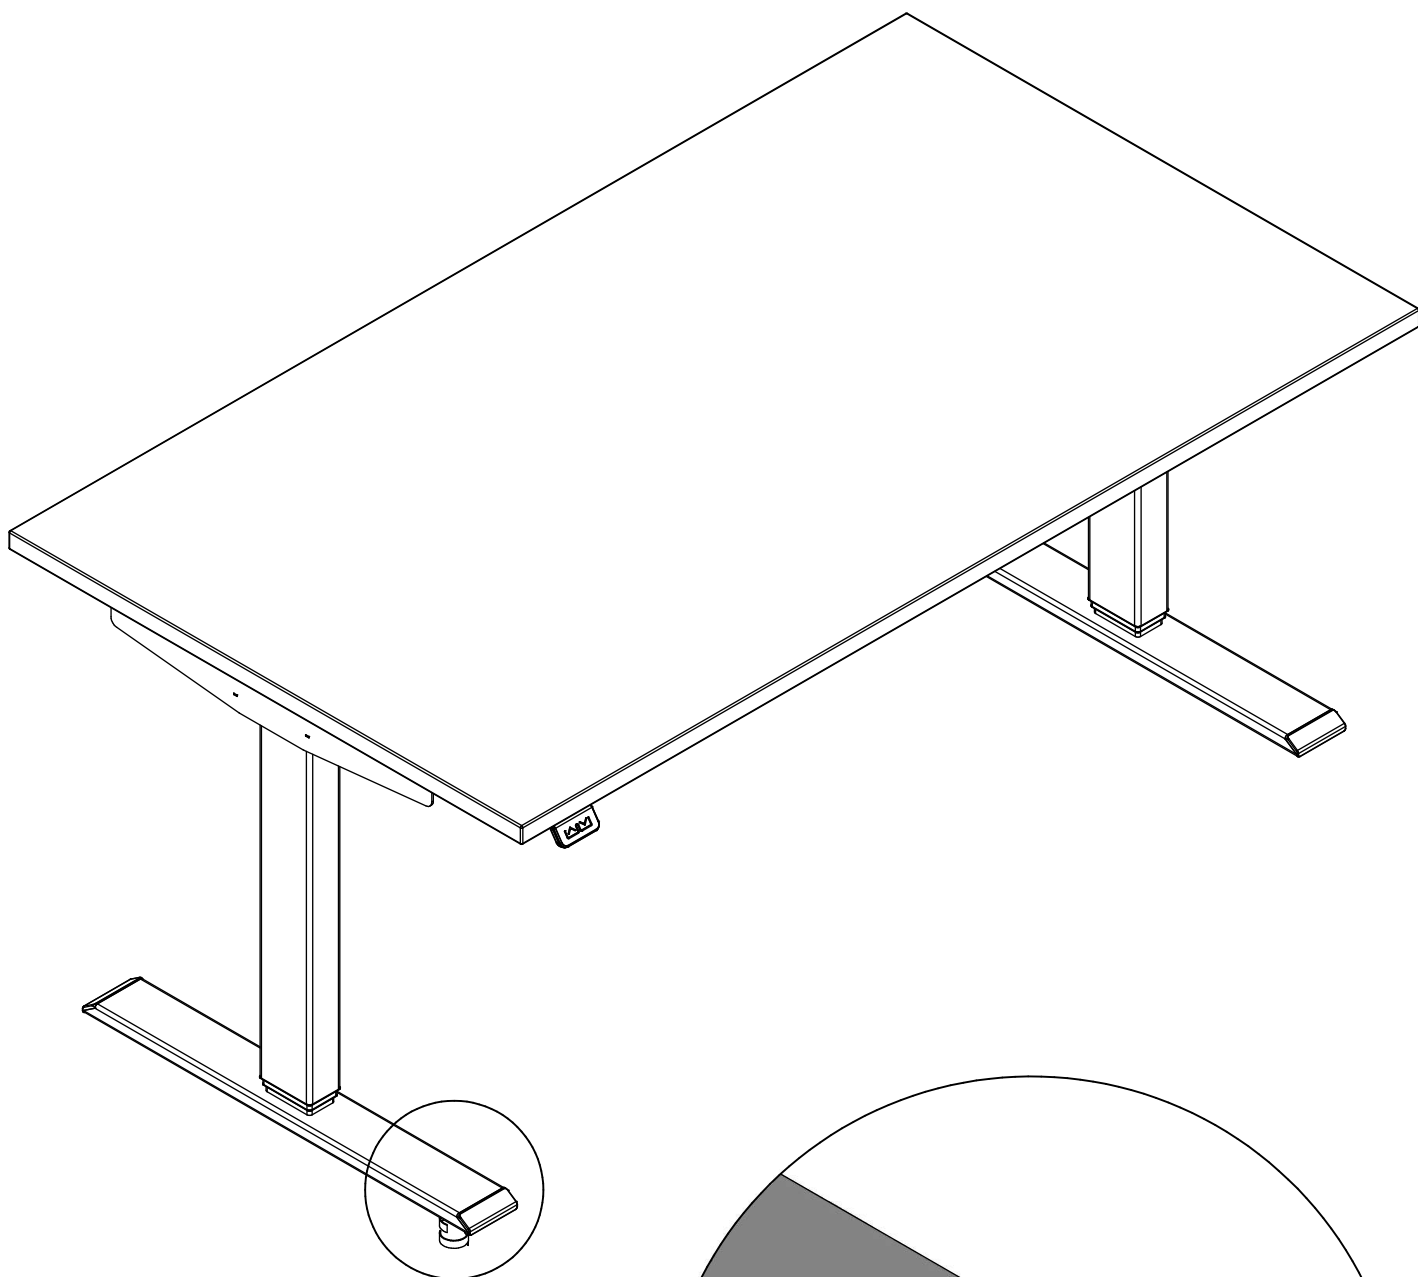

Basic2 Troubleshooting

- Check all connections that are in the bottom and correctly closed.
- The wires are secured under the cover and cannot swing to activate the anti-collision.
- Unplug the power cord and plug it back in.
- Change the ports on the lifting column connectors.
- If the frame does not move downwards, perform a reset.
- Check that the control unit is attached to the upper frame by the rails so that it does not activate the anti-collision when swinging.
- resetting the table (you should be patient here). Press the button at the bottom until it starts moving, about 30 sec.).
- Push the down-button as long as table starts to move, and goes to the lowest possible height. This step may need to be repeated several times. Release your finger from the button and press down again, and the table should shake slightly. The table should now be at its lowest height. Now the resetting is completed successfully.

Assembly video:

<https://youtu.be/IRb2-m504K0>

More help:

tuotetuki@vesalainen.fi